

Spare parts

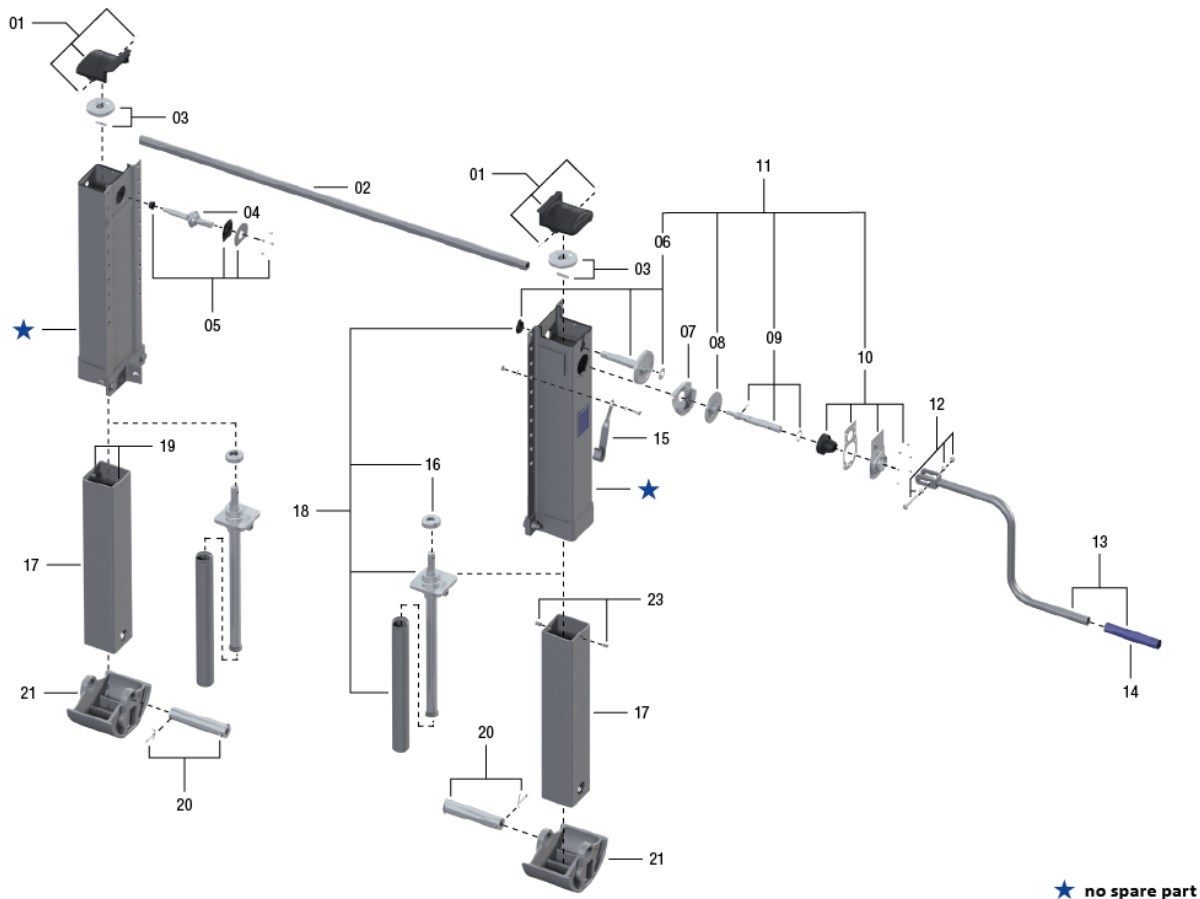


Fig	Description	Part No	Fig	Description	Part No
01	Cover with bolts	JSE0046100	11	Drive, with 6,9,10	JSE0117000
02	Cross shaft	JSL10	12	Bolts, washers, nuts	JSE0043100
03	Bevel gear with bolts	JSE0058600	13	Crank w. 14	JSU02
04	Shaft	JSE0001500	15	Crank hook	JSE0040202
05	Bearing	JSE0114000	16	Axial bearing	JSE0066401
06	Shaft with Bearing	JSE0058700	17	Inner tube *	
07	Grease tank	JSE0002000	18	Spindle w. 16 *	
08	Gear	JSE0055800	19	Cylindrical pin	JS1120-0007
09	Crank shaft	JSE0046500	20	Shaft w. split pins	JSE0111800
10	Bearing holder	JSE0111500	21	A-Foot w. 20	JSD02CA

* Only available with complete leg L/H or R/H